
 


1 OVERVIEW


1.1 WHAT'S INCLUDED

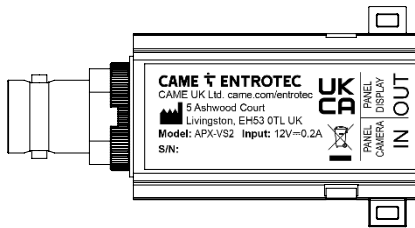

1x **APX-VS2**
2-Channel Video Switcher /
Sequencer



1x **CABLE ASSEMBLY**
Connects to Call Panel
(supplied separately)

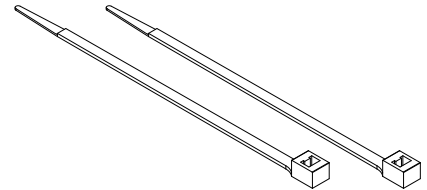


2x **CABLE TIES**
(For affixing device and
cable strain relief)

1.2 INTENDED USE

The APX-VS2 is an accessory for a call panel that forms part of an APX video intercom system. The APX-VS2 should be fitted in-line between the call panel mount camera and call panel display board, providing an additional BNC video input from a secondary camera, such as an external dome camera.

1.3 CONNECTIONS


**EXTERNAL
CAMERA
INPUT**

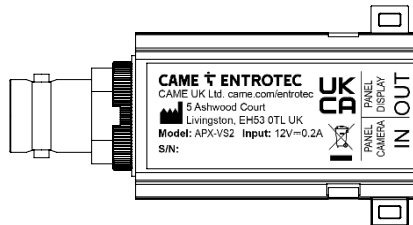

SEQUENCED OUTPUT

PANEL CAMERA INPUT

2 INSTALLATION

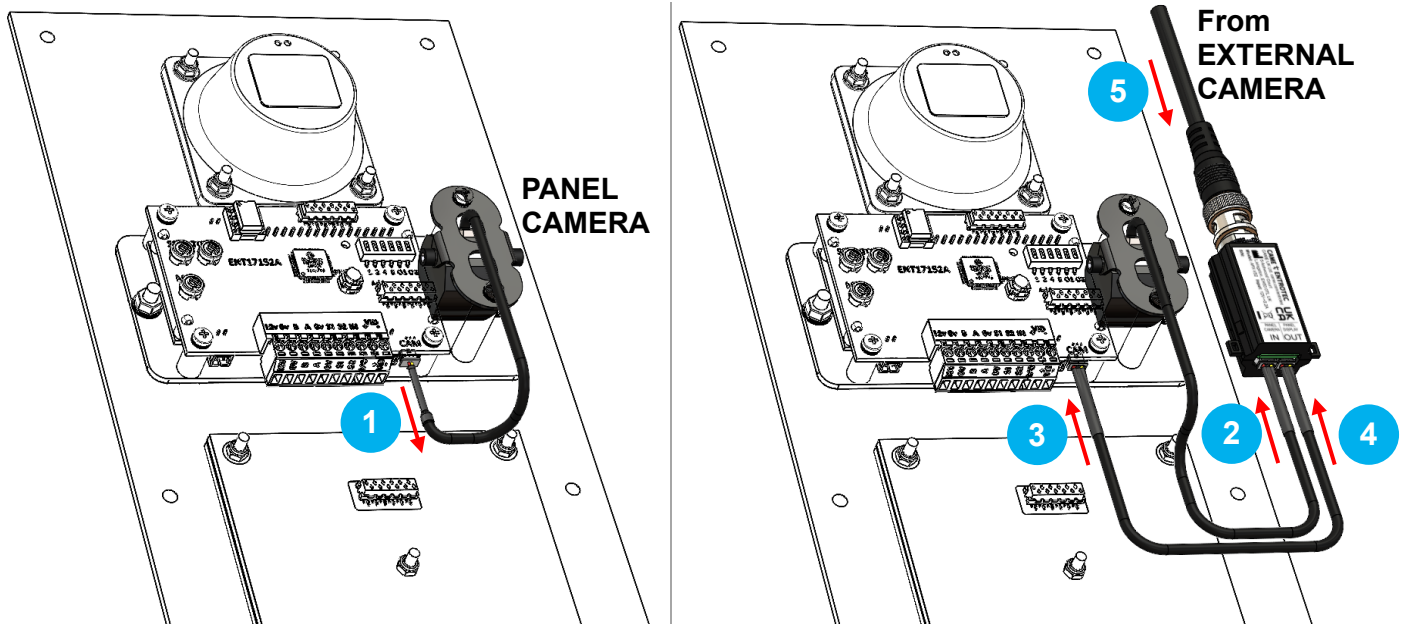

1. Disconnect the **PANEL CAMERA** from 'CAM' connection on the Display Board.
2. Connect the **PANEL CAMERA** to the 'IN' connection on the **APX-VS2**.
3. Connect the **CABLE ASSEMBLY** to 'CAM' connection on the Display Board.
4. Connect the other end of the **CABLE ASSEMBLY** to 'OUT' connection on the **APX-VS2**.
5. Connect the RG59 Cable (BNC plug) from **EXTERNAL CAMERA** to the **APX-VS2** BNC Jack.

BNC INSULATION

Use a BNC connector with an insulating shroud or cover with insulating tape.